




"Germ Free Water from A Masterpiece of Craftsmanship"

ISO 9001:2000 CERTIFIED

# aquathin ULTRAVIOLET

## model T-PFP-UV

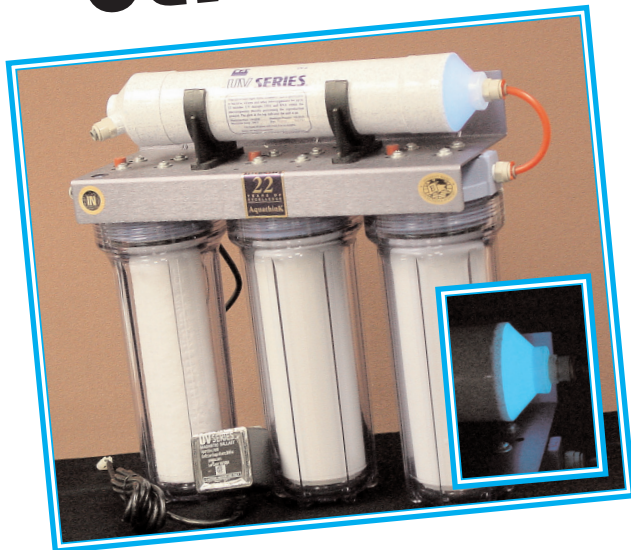

The AQUATHIN Model T-PFP-UV includes the following features:

- ★ Includes dual gradient 10-5 micron sediment cartridge for heavy duty dirt holding capacity.
- ★ Granular activated "unidirectional" carbon cartridges to provide maximum contact time for organic adsorption followed by carbon block rated cyst removal.
- ★ Three clear view filter housings to permit visual inspection.
- ★ Anodized aluminum framework for long life and to resist corrosion.
- ★ Sealed Polypropylene UV pressure vessel.
- ★ Choice of 1/4" or 3/8" tubing.
- ★ UV lamp incorporates a Light Emitting End Port indicating irradiation in effect.
- ★ High efficient pure crystal sleeve separating the lamp from water.
- ★ Utilizes state-of-the-art low voltage electronics.
- ★ Optional WATERMINDER 2000 water meter can be field set to meter down up to 2000 gallons before shutting down incoming water signifying filter replacement.
- ★ Optional carafe faucet and source water valve for point of use installation.

Aquathin  
USA

27  
YEARS

PURE  
EXCELLENCE




EPA EST. NO. 52531-FL-01

Purifying the Waters of the World...

# aquathin

For the Best Taste in Life!

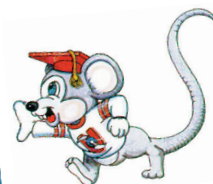

## INSTALLATION OF OPTIONAL T-PFP-UV

*Thank you for your purchase of the AQUATHIN PREFILTER PACKAGE. Following is the step by step installation procedure. The T-PFP-UV is designed to be easily installed on the feedwater line.*

- 1) *Select a suitable location for the T-PFP-UV and mount with the screws supplied.  
**NOTE:** Be sure to leave enough space between the bottom of the filter housings and the cabinet base. This will allow you to change prefilters without removing the entire T-PFP-UV.*
- 2) *Shut off the cold water supply line. Clamp the saddle valve marked (FEED VALVE) to the cold water line. Turn the handle fully clockwise to pierce the line.*
- 3) *Connect the water supply (feed) to the "in" elbow on the T-PFP-UV with 1/4" tubing. It is located on the left side of the filter housing.*
- 4) *Select the desired position on the flat area of your sink for the carafe faucet. Drill a 1/2" hole and mount the faucet. Use a "glass and tile carbide spade tip bit" for porcelain.*
- 5) *Connect the "out" elbow to the base of the carafe faucet with 1/4" tubing.*
- 6) *Turn the handle of the feed valve fully counter-clockwise to allow water flow.*
- 7) *Turn on the cold water supply and plug in the T-PFP-UV unit. You are now operational.*
- 8) *Depress handle on carafe faucet to dispense.*